



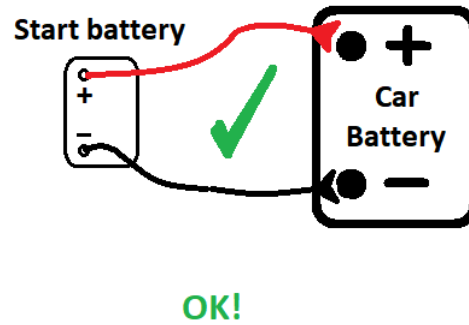

Battery Isolator

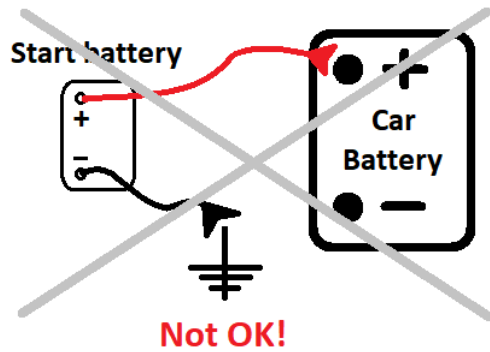

State indications:

	<i>Blue LED on the Battery Isolator</i>	<i>Red LED on the internal switch</i>	<i>State</i>
Normal condition	Not lit	Dimly lit	Off
	Lit	Lit	On
Fault	2 flashes	2 flashes	Switched off with external kill button
	3 flashes	3 flashes	Switched off due to overcurrent
	4 flashes	4 flashes	Switched off due to too high reverse current
	5 flashes	5 flashes	Switched off due to too high temperature
	6 flashes	6 flashes	Switched off due to low voltage
	7 flashes	7 flashes	Switched off due to high voltage
	8 flashes	8 flashes	Switched off due to overcurrent (short circuit)

