



Note 1: Connect either ECU out 1-4 or Switch Panel out 1-4  
 Note 2: Connect ignition or fuel pump wire.  
 Note 3: Connect ignition or battery.  
 Attention:  
 A-B-C-D is not cylinder order, this is firing order!  
 For example, 4 cylinders, 1-3-4-2 firing order:  
 1 2 3 4  
 A D B C


## ASMoto ECU 61x

### Wiring diagram 1.1

2018

ASMoto Race Electronics


www.asmoto.eu

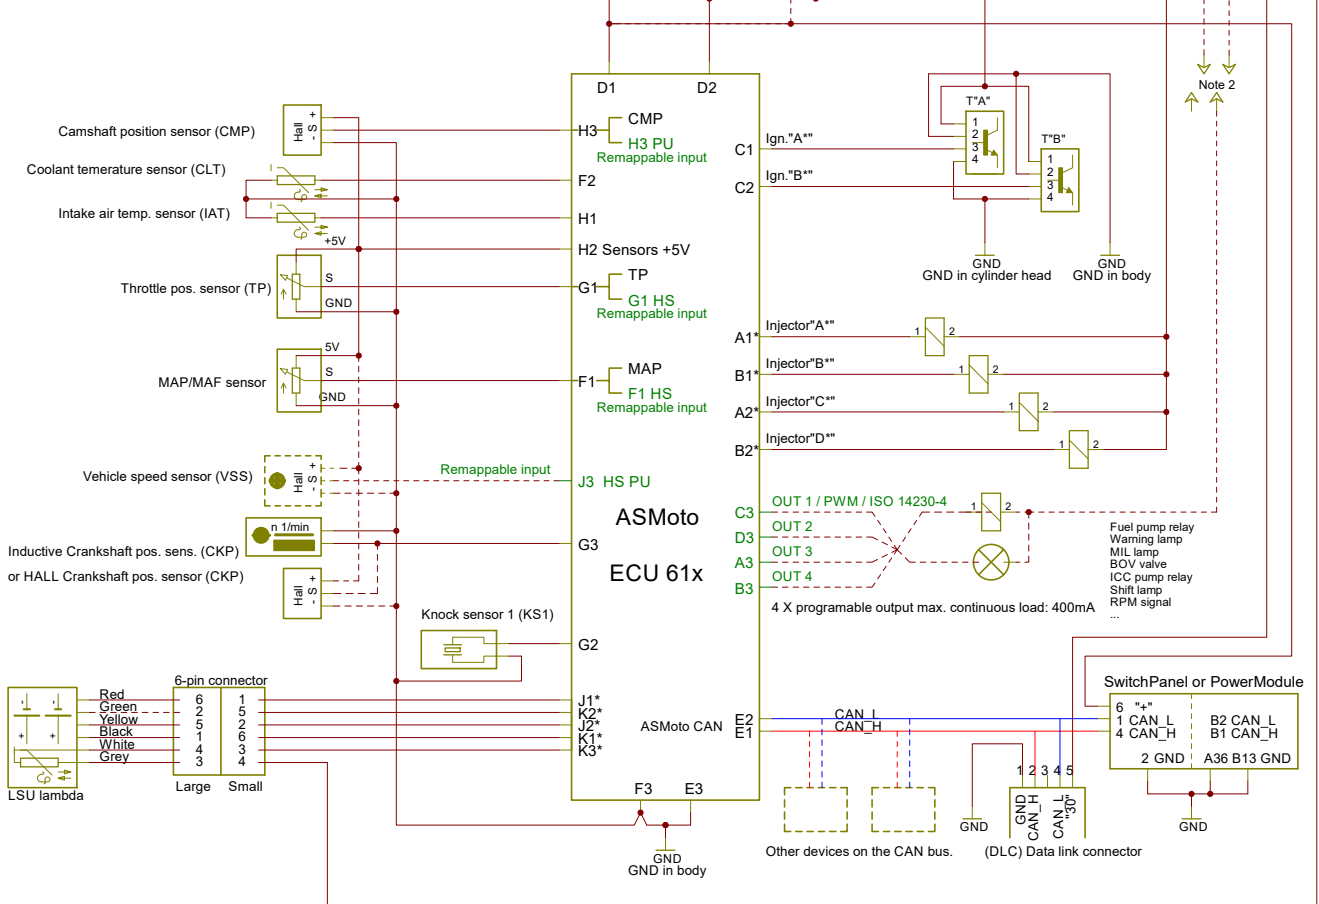

Green marked with the remappable input / output HS: High speed analog input (100 sample/s) PU: Internal 4.7kOhm pull up resistor

\* Only ECU612

### ASMoto CAN Bus Wiring Requirements:

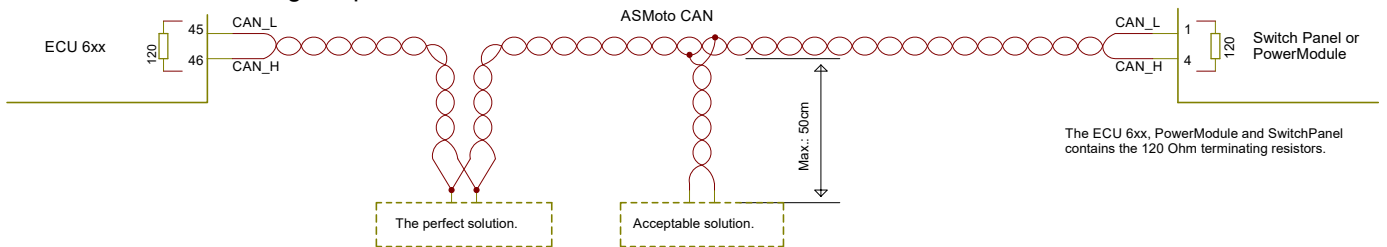

Other devices connected to the CAN bus. Eg.: DashBoard, DataLogger, Data link connector, and etc...

### 30 pin connector WIRE side:

