




Note 1: Connect either ECU out 1-4 or Switch Panel out 1-4
 Note 2: Connect ignition or fuel pump wire.
 Note 3: Connect ignition or battery.
 * Attention:
 A-B-C-D-E-F is not cylinder order, this is firing order!
 For example, 4 cylinders, 1-3-4-2 firing order:
 1 2 3 4
 A D B C

ASMoto ECU 60x ASMoto ECU 66x Wiring diagram 6.4

2018


ASMoto Race Electronics

www.asmoto.eu

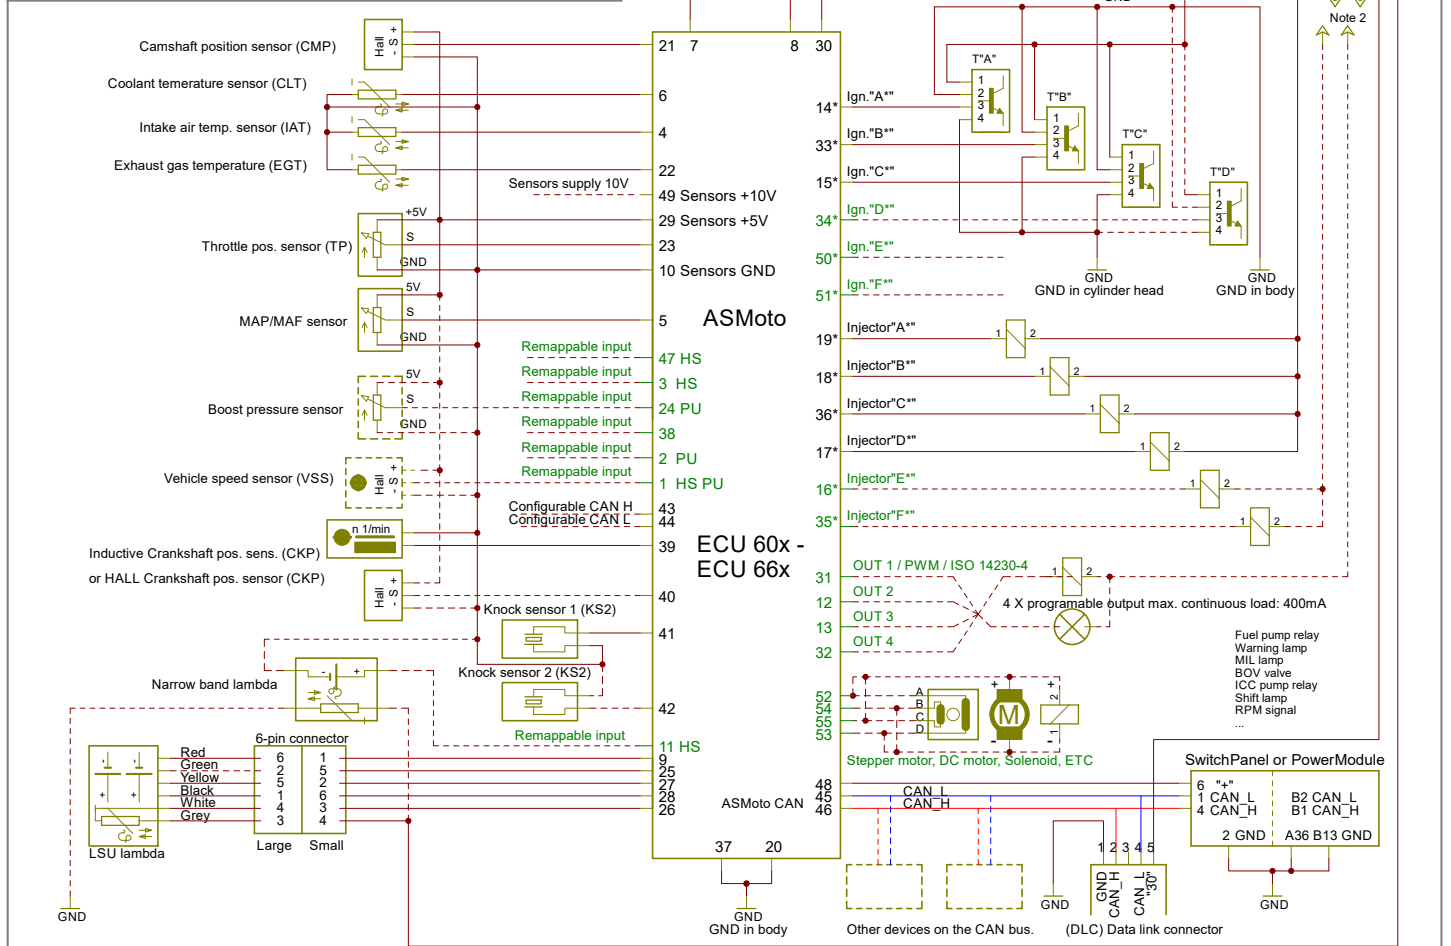

Green marked with the remappable input / output HS: High speed analog input (100 sample/s) PU: Internal 4.7kOhm pull up resistor

ASMoto CAN Bus Wiring Requirements:

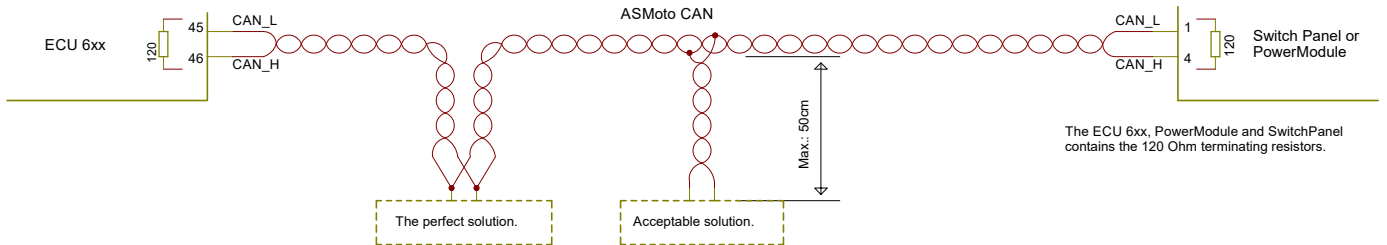

Other devices connected to the CAN bus. Eg.: DashBoard, DataLogger, Data link connector, and etc...

55 pin connector WIRE side:

